
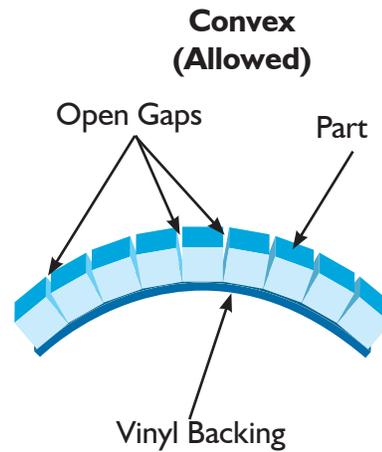
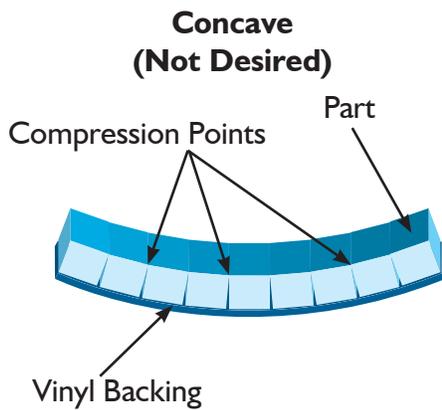



# Proper Removal of VDP Parts (Vinylized Diced Patties)

## Proper Method for Removing Parts from Vinylized Diced Patties

Always maintain patties on the flat cardboard support provided with the shipment. Do not allow the patties to flex concave allowing the top edges of glass to compress and chip.

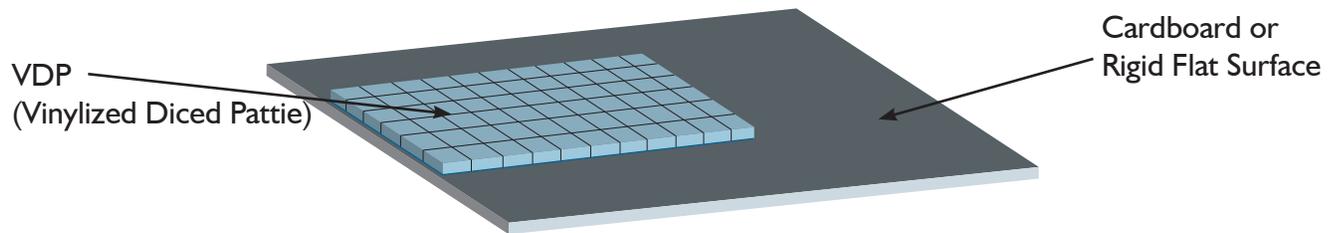


To remove parts, place pattie Vinyl Backing Side Down on the edge of a rigid flat surface.

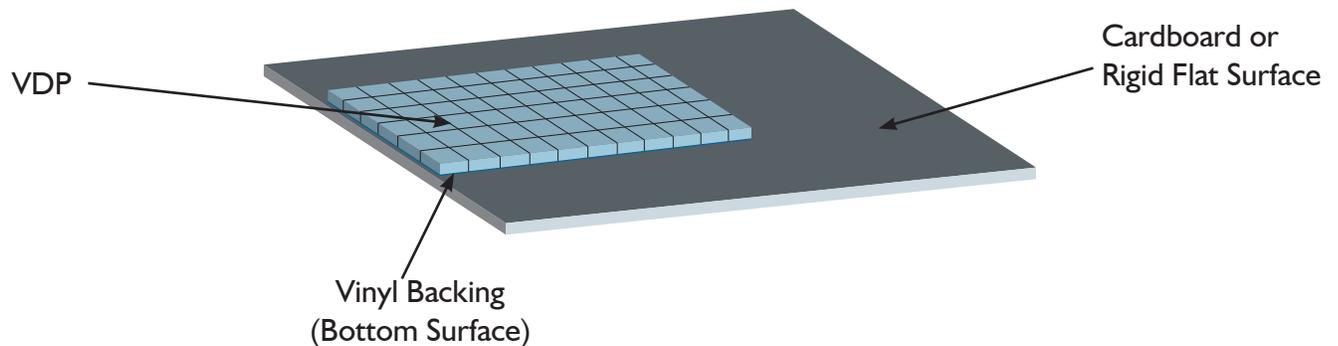

# Proper Removal of VDP Parts (Vinylized Diced Patties)


Slide the first row of parts on the pattie over the edge of the flat surface and fold it down to expose the edge of the row.

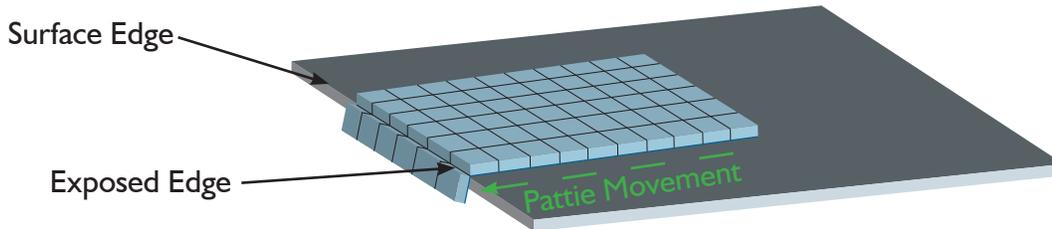

Carefully peel one part at a time from the exposed row. If using a tool for part removal, use bamboo tweezers (these can be purchased online from manufacturer Uxcell; there are several options). **Metal tweezers will chip/scratch/damage glass and should not be used.**



Bamboo  
Tweezers

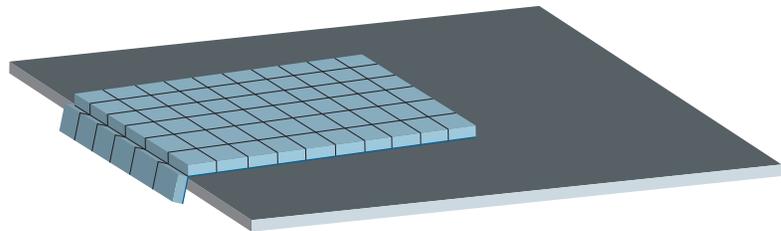

Repeat steps 3 & 4 as needed, being careful not to bend the pattie concave during handling. Store any remaining parts on the vinylized pattie and on a rigid flat surface (as shipped).